

# KLARKTEKNIK 2-Channel Active DI Box DN200 User Guide

Home » KLARKTEKNIK » KLARKTEKNIK 2-Channel Active DI Box DN200 User Guide

#### **Contents**

- 1 KLARKTEKNIK 2-Channel Active DI Box DN200
- 2 Specifications
- **3 LEGAL DISCLAIMER**
- **4 LIMITED WARRANTY**
- 5 Documents / Resources
- **6 Related Posts**





**KLARKTEKNIK 2-Channel Active DI Box DN200** 



#### **DN200**

2-Channel Active DI Box with Extended Dynamic Range and Sum/Split Options

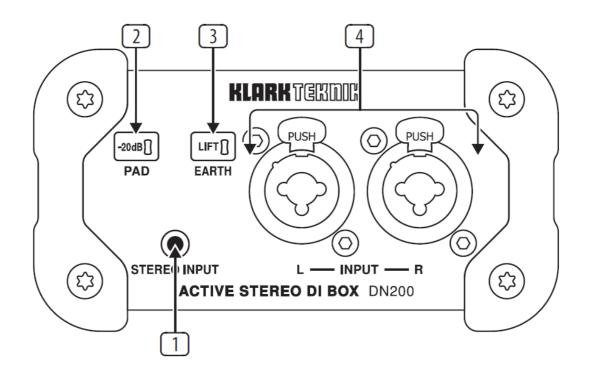

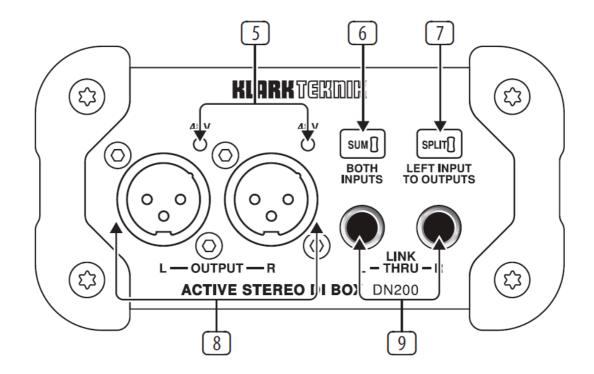

- 1. STEREO INPUT Connect a line-level audio source via stereo 1/8" TRS cable. Ensure that the L/R INPUTS and LINK THRU jacks are disconnected when using the STEREO INPUT jack.
- 2. PAD Press to reduce the input signal by 20 dB for use with hot signals.
- 3. EARTH Press to separate the input and output grounds, potentially eliminating earth/ground loops between equipment on different mains supplies.
- 4. L/R INPUT Connect either balanced or unbalanced XLR or 1/4" cables. Ensure that the 1/8" STEREO INPUT jack is disconnected when using these inputs.
- 5. 48 V LED Lights when the unit receives sufficient phantom power. Note that the DN200 must be powered to operate correctly.
  - **Important:** Although the DN200 will function as a mono device when only one channel is connected, both channels should be powered to use stereo, split, or sum modes.
- 6. SUM When engaged, the left and right inputs are summed and fed to the left and right outputs. Note that phantom power must be delivered to both output connections for dual-output operation.
- 7. SPLIT When engaged, the left input is fed to the left and right outputs. Note that phantom power must be delivered to both output connections for dual-output operation.
- 8. L/R OUTPUT Send the signals to a mixer or recording interface via balanced XLR cables. Note that the connected device must be able to provide +48 V phantom power to these connectors.
- 9. LINK THRU Send the signals to an alternate source via balanced or unbalanced 1/4" cables. Ensure that the 1/8" STEREO INPUT jack is disconnected when using these outputs.

### **Specifications**

#### Inputs

Connectors	2 x combo XLR, 2 x 1/4" TRS link jacks, 1/8" stereo TRS jack
Impedance	1 M $\Omega$ (combo & link jacks balanced), 20 k $\Omega$ (combo XLR only), 500 k $\Omega$ (1/8" stereo TRS jack unbalanced)
Max input level	28 dBu combo XLR and TRS link jacks (pad enabled), 21 dBu 1/8" T RS jack (pad enabled)
Attenuator	20 dB pad

## Outputs

Connectors	2 x 3-pin XLR
Impedance	50 Ω
Max output level	13 dBu with 10 k $\Omega$ load, 10 dBu with 600 $\Omega$ load
Min load	600 Ω

# System

Noise	-103 dBu, 22 Hz to 22 kHz unweighted, with input terminated by 10 k $\Omega$ resistor
Frequency response	20 Hz to 20 kHz, $\pm 1$ dB, $10~\text{k}\Omega$ load
Distortion (THD + N)	Typically <0.005% @ 1 kHz, +10 dBu
Crosstalk	<100 dB @ 1 kHz, inputs terminated

## **Power Requirement**

Voltage +48 V phantom Current consumption <10 mA per channel

## **Physical**

Dimensions 118 x 63 x 142 mm (4.7 x 2.5 x 5.6")

Weight 0.65 kg (1.43 lbs)

Note: Operation Ambient Temperature up to 45oC

### **LEGAL DISCLAIMER**

Music Tribe accepts no liability for any loss which may be suffered by any person who relies either wholly or in part upon any description, photograph, or statement contained herein. Technical specifications, appearances and other information are subject to change without notice. All trademarks are the property of their respective owners. Midas, Klark Teknik, Lab Gruppen, Lake, Tannoy, Turbosound, TC Electronic, TC Helicon, Behringer, Bugera, Auratone and Coolaudio are trademarks or registered trademarks of Music Tribe Global Brands Ltd. © Music Tribe Global Brands Ltd. 2020 All rights reserved.

#### **LIMITED WARRANTY**

For the applicable warranty terms and conditions and additional information regarding Music Tribe's Limited Warranty, please see complete details online at <a href="mailto:musictribe.com/warranty">musictribe.com/warranty</a>



### **Documents / Resources**



KLARKTEKNIK 2-Channel Active DI Box DN200 [pdf] User Guide 2-Channel, Active, DI Box, DN200, Extended, Dynamic, Range, Sum Split Options, KLARKTEK NIK

Manuals+,